



UV SYSTEM CONTROL

No Flow, UV System will be shut down!

The flow switch is installed upstream of the UV reactor. The kit includes the flow switch and connector to glue on the pipe. It includes the connection cables to the wall box, with a socket that provides power to the UV reactor.

Now, everything is simple, if the flow rate is zero, the UV reactor will be safe.



**Active safety for
your UV system**

Easy to install

Plug and play

**Single system to
manage your UV
reactor**

**Power supply: 120
Volt 60 Hz GFCI
(not included in
the kit)**

**VDV MANAGEMENT
INC.**

12260, Green Lane
Montréal, Qc H4K 2C3
Canada

www.uvtech.ca

Tel:(1) 514 745-3151